


Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence ➔ [P. 34](#)
- Check that there is gasoline in the fuel tank
- Check if the PGM-FI malfunction indicator lamp (MIL) is on
 - ▶ If the indicator light is on, contact your dealer as soon as possible.

Starter Motor Does Not Operate

Check the following items:

- Make sure the engine stop switch is in the  (Run) position ➔ [P. 32](#)
- Check for a blown fuse ➔ [P. 104](#)
- Check for a loose battery connection or battery terminal corrosion ➔ [P. 62](#)
- Check the condition of the battery ➔ [P. 99](#)

If the problem continues, have your motorcycle inspected by your dealer.