


Blown Fuse

Before handling fuses, see “Inspecting and Replacing Fuses.” ➔ P. 50

Fuse Box Fuses

1. Remove the seat. ➔ P. 59
2. Remove the fuse box covers.
3. Pull the fuses out with the fuse puller in the tool kit one by one check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
4. Install the fuse box covers.
5. Install the seat.

CB500X

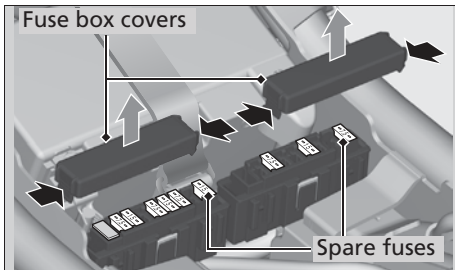

CB500XA

