

Instruments *(Continued)*

Display Setting

Following items can be changed sequentially.

- Clock setting
- Backlight brightness adjustment
- Activating/deactivating of tripmeter A, average fuel mileage and fuel consumption automatic reset mode
- Changing of speed and mileage unit
- Changing of fuel mileage meter unit (only when km unit system is selected)

➡ Press and hold **[SEL]** button and **[SET]** button

➡ Press **[SET]** button

