



7. Apply a thin coat of engine oil to the rubber seal of a new oil filter.
8. Install the new oil filter and tighten.

**Torque:** 19 lbf·ft (26 N·m, 2.7 kgf·m).

9. Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

**Torque:** 22 lbf·ft (30 N·m, 3.1 kgf·m).

10. Fill the crankcase with the recommended oil (► P. 51, 130) and install the oil fill cap.

**Required oil**

**When changing oil & engine oil filter:**

2.9 US qt (2.7 liters)

**When changing oil only:**

2.6 US qt (2.5 liters)

11. Check the oil level. ► P. 63
12. Check that there are no oil leaks.