

**Engine**

Number .....	115
Oil .....	51, 63
Oil Filter .....	65
Overheats .....	90
Starting .....	34
Stop Switch .....	32, 34, 108
Stopping .....	108

<b>Environment</b> .....	114
--------------------------	-----

**Equipment**

Owner's Manual .....	38
Tool Kit .....	38

**F**

<b>Flooded Engine</b> .....	34
-----------------------------	----

<b>Front Suspension</b> .....	85
-------------------------------	----

**Fuel**

Consumption Meter .....	20
Gauge .....	19
Mileage Meter .....	20
Oxygenated .....	122
Recommended .....	36
Remaining .....	19

Tank Capacity .....	36
<b>Fuses</b> .....	50, 104

**G**

<b>Gasohol</b> .....	122
<b>Gasoline</b> .....	36

**H**

<b>Hazard Switch</b> .....	32
----------------------------	----

<b>Headlight Aim</b> .....	83
----------------------------	----

<b>Headlight Dimmer Switch</b> .....	32
--------------------------------------	----

<b>Helmet Holder</b> .....	37
----------------------------	----

<b>High Beam Indicator</b> .....	31
----------------------------------	----

<b>High Coolant Temperature Indicator</b> .....	30, 90
---	--------

<b>Honda Contacts</b> .....	126
-----------------------------	-----

<b>Horn Button</b> .....	32
--------------------------	----

**I****Ignition Cut-off System**

Banking Sensor .....	108
----------------------	-----

Side Stand .....	73
------------------	----

<b>Ignition Key</b> .....	107
---------------------------	-----