

The following moves the ordinary display at display setting.

 
- The button is not pressed for about 30 seconds
- Turn the ignition switch to the OFF position and then to the ON position

1 Clock setting:


- 1 Turn the ignition switch to the ON position.
- 2 Press and hold **[SEL]** button and **[SET]** button until the hour digits start flashing.
- 3 Press **[SEL]** button until the desired hour is displayed.
 - ▶ Press and hold to advance the hour fast.



- 4 Press **[SET]** button. The minute digits start flashing.



 - 5 Press **[SEL]** button until the desired minute is displayed.
 - ▶ Press and hold to advance the minute fast.



- 6 Press **[SET]** button. The clock is set, and then the display moves to the backlight brightness adjustment.