

Example: REV indicator blinking fastest  
 RPM: 8,750 r/min (rpm)  
 REV indicator blinking interval  
 RPM: 250 r/min (rpm)

REV indicator	r/min (rpm)
Blinking	8,250 r/min (rpm)
Blinking fast	8,500 r/min (rpm)
Blinking fastest	8,750 r/min (rpm)

If the "REV indicator blinking interval RPM" is 0, the REV indicator blinks when reaching the "REV indicator blinking fastest RPM" setting value.

- Press **SET** button. The "REV indicator blinking interval RPM" is set, and then the display moves to the brightness adjustment of the REV indicator. The REV indicator switches from blinking to lighting.
- Press **SEL** button. The brightness level is switched.
  - You can adjust the brightness level from five levels.



- Press **SET** button. The brightness of the REV indicator is set, and then the display moves to the display setting of the tachometer.