


Left Side Cover

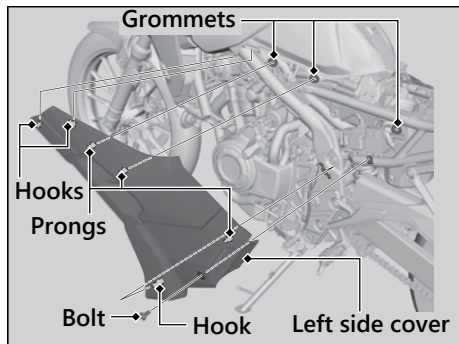

Removal

1. Remove the seat. ► P. 78
2. Remove the bolt.
3. Remove the prongs from the grommets, then remove the left side cover backward by releasing the hooks.

Installation

Install the parts in the reverse order of removal.