

Troubleshooting

Engine Will Not Start	P. 108	Battery Goes Dead.....	P. 122
Overheating (Segment H flashes in coolant temperature gauge)	P. 109	Burned-out Light Bulb	P. 122
Warning Indicators On or Flashing	P. 110	Blown Fuse.....	P. 125
Low Oil Pressure Indicator	P. 110		
PGM-FI (Programmed Fuel Injection)			
Malfunction Indicator Lamp (MIL).....	P. 110		
ABS (Anti-lock Brake System) Indicator	P. 111		
Other Warning Indications	P. 112		
Fuel Gauge Failure Indication.....	P. 112		
Coolant Temperature Gauge Failure			
Indication	P. 113		
Tire Puncture	P. 114		
Electrical Trouble	P. 122		