The average fuel mileage and fuel consumption will be based on tripmeter A.

• Current fuel mileage: Current instant fuel mileage. If your speed is less than 5 mph (7 km/h), "•••••" is displayed.

When " , is displayed at speeds above 5 mph (7 km/h), go to your dealer for service.

- Average fuel mileage: Average fuel mileage since tripmeter A was reset. When "- - " is displayed, go to your dealer for service.
- Fuel consumption: Total fuel consumption since tripmeter A was reset. When "-----" is displayed, go to your dealer for service.
- Reserve fuel consumption: If the engine stop switch is in the X (Stop) position, " is displayed. When " is displayed in other cases, go to your dealer for service.
 To reset the average fuel mileage and fuel consumption: P.22