
## **Switches**

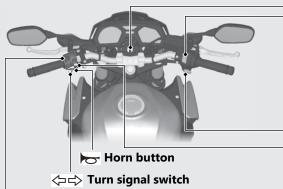

Pressing the switch turns the turn signal off.

## **Headlight dimmer switch**

- **■** : High beam
- **■**D: Low beam

## **Engine stop switch**

Should normally remain in the (Run) position.

- ▶ In an emergency, switch to the 

  ☆ (Stop) position (the starter motor will not operate) to stop the engine.
- Start button

Switchable when the ignition switch is on. Can be turned to the OFF position off regardless of the ignition switch position.

➤ The signals continue flashing with the ignition switch is to the OFF position or LOCK position after the hazard switch is on.