

Instruments & Controls

This section shows the location of all gauges, indicators, and controls you would normally use before or while riding your motorcycle.

The items listed on this page are described in this section. Instructions for other components are presented in other sections of this manual where they will be most useful.

Operation Component Locations	11
Gauges, Indicators & Displays.....	14
Multi-function Display.....	25
Coolant Temperature Meter	26
Low Fuel Indicator and Reserve	
Fuel Consumption	28
Low Oil Pressure Indicator and	
Warning Indicator	30
High Coolant Temperature Indicator	
and Warning Indicator.....	31
HESD Indicator	32
Changing the Indication of	
Multi-function Display.....	33
Speedometer	34
Odometer/Tripmeter A & B.....	35
Fuel Mileage Meter	37

(cont'd)