


## ■ Starter Motor Operates But Engine Does Not Start

Check the following items:

- Make sure engine stop switch is RUN  position ➔P.30
- Check the correct engine starting sequence ➔P.32
- Check that there is gasoline in the fuel tank
- Check if the PGM-FI malfunction indicator lamp (MIL) is ON
  - ▶ If the indicator light is ON, contact your dealer as soon as possible.

## ■ Starter Motor Does Not Operate

Check the following items:

- Check for a blown fuse ➔P.102
- Check for a loose battery connection or battery terminal corrosion ➔P.46
- Check the condition of the battery ➔P.97

If the problem continues, have your motorcycle inspected by your dealer.