



Blown Fuse

Before handling fuses, see “Inspecting and Replacing Fuses.” ➤ P.47

■ Fuse Box Fuses (CBR1000RR)

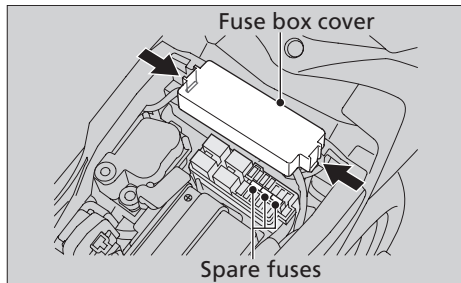

(CBR1000RR ABS)

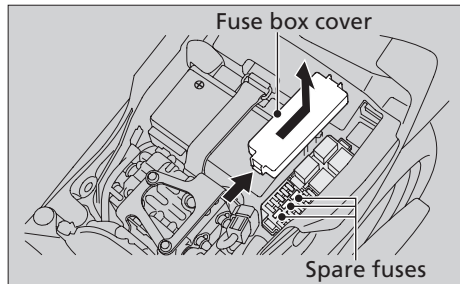

1. Remove the front seat. ➤ P.55
2. Remove the fuse box cover.
3. Pull the fuses out one by one check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
4. Reinstall the fuse box cover.
5. Reinstall the front seat.