
## **Instruments**

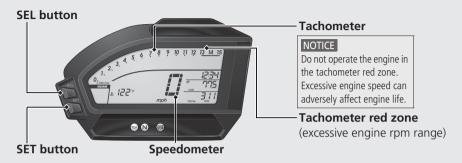

## **Display Check**

Alternately displays the contents of two patterns.

## Pattern 1

When the ignition switch is turned on, tachometer segment progress to maximum scale and then disappear.

## Pattern 2

When the ignition switch is turned on, all the mode and digital segments will show. If any part of these displays does not come on when it should, have your dealer check for problems.