 


Instruments *(Continued)*

Setting Mode A

1 To set the clock:

- 1 Turn the ignition switch to ON.
- 2 Press and hold SEL button and SET button until the hour digits start flashing.



- 3 Press SEL button until the desired hour is displayed.
 - ▶ Press and hold to advance the hour fast.



 
- 4 Press SET button. The minute digits start flashing.



- 5 Press SEL button until the desired minute is displayed.
 - ▶ Press and hold to advance the minute fast.



- 6 Press SET button. The hour and minute digits start flashing.
- 7 If necessary, press SEL button to select the second display.



- 8 Press SET button. The clock is set, and then the display moves to the backlight brightness adjustment.

