


■ Main Fuse & FI Fuse

1. Remove the front seat. ► P. 65
2. **(CBR1000RR)**
Remove the starter magnetic switch cover.
(CBR1000RR ABS)
Open the main and FI fuse box cover.
3. Pull the main fuse and FI fuse out one by one and check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
► Spare fuses are provided in the fuse box. ► P. 111
4. Reinstall parts in the reverse order of removal.

(CBR1000RR)

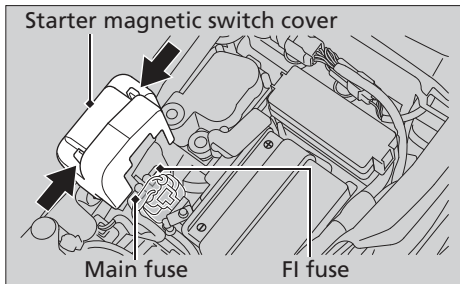

(CBR1000RR ABS)

