 


Instruments *(Continued)*

Setting Mode A

1 To set the clock:

- a Turn the ignition switch to ON.
- b Press and hold **SEL** button and **SET** button until the hour digits start flashing.



- c Press **SEL** button until the desired hour is displayed.
 - u Press and hold **SEL** button to advance the hour fast.



 
- d Press **SET** button. The minute digits start flashing.



- e Press **SEL** button until the desired minute is displayed.
 - u Press and hold **SEL** button to advance the minute fast.



- f Press **SET** button. The hour and minute digits start flashing.
 - g If necessary, press **SEL** button to select the second display.



- h Press **SET** button. The clock is set, and then the display moves to the backlight brightness adjustment.

