


Instruments *(Continued)*

USER LETTER

You can select any 10 characters you like.

- 1 Select the first character using the **SEL** **▲** (up) or **SEL** **▼** (down) button until a desired character appears
 u Press and hold the **SEL** **▲** (up) or **SEL** **▼** (down) button to move the menu quickly.
- 2 Press the **MODE** button. The cursor moves to the next position.
- 3 Repeat the steps **1** and **2** to select characters for the other positions until a desired word is complete..
- 4 When the tenth character is selected, the display returns to the upper level hierarchy.

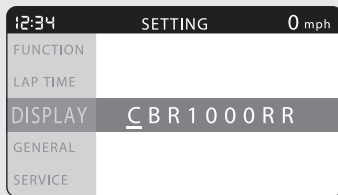

A list of characters that can be selected

A	B	C	D	E	F	G	H	I
J	K	L	M	N	O	P	Q	R
S	T	U	V	W	X	Y	Z	0
1	2	3	4	5	6	7	8	9
!	"	#	\$	%	&	'	'	(
)	*	+	,	-	.	/	:	;
<	>	=	?	@	^	_		