


## Instruments *(Continued)*

### DATE & TIME

- 1 Press the **SEL** **▲** (up) or **SEL** **▼** (down) button until the desired tens digit of the year is displayed.
- 2 Press the **MODE** button. The cursor moves to the ones digit of the year.

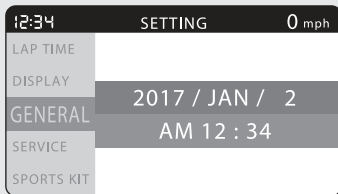

- 3 Press the **SEL** **▲** (up) or **SEL** **▼** (down) button until the desired ones digit of the year is displayed.

- 4 Press the **MODE** button. The cursor moves to the indication of month.
- 5 Press the **SEL** **▲** (up) or **SEL** **▼** (down) button until the desired month is displayed.
- 6 Press the **MODE** button. The cursor moves to the indication of date.
- 7 Press the **SEL** **▲** (up) or **SEL** **▼** (down) button until the desired date is displayed.
- 8 Press the **MODE** button. The cursor moves to the "AM" or "PM".
- 9 Select the "AM" or "PM" using the **SEL** **▲** (up) or **SEL** **▼** (down) button.
- 10 Press the **MODE** button. The cursor moves to the indication of hour.
- 11 Press the **SEL** **▲** (up) or **SEL** **▼** (down) button until the desired hour is displayed.