


- Remove the oil filter with a filter wrench and let the remaining oil drain out. Make sure the prior seal is not stuck to the engine.
 - u Discard the oil and oil filter at an approved recycling center.

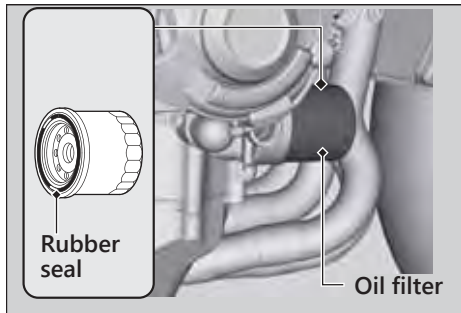

- Apply a thin coat of engine oil to the rubber seal of a new oil filter.

- Install the new oil filter and tighten.

Torque: 19 lbf·ft (26 N·m, 2.7 kgf·m)

- Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

Torque: 22 lbf·ft (30 N·m, 3.1 kgf·m)

- Fill the crankcase with the recommended oil (2 P. 129, 2 P. 224) and install the oil fill cap.

Required oil

When changing oil & engine oil filter:

2.9 US qt (2.7 L)

When changing oil only:

2.6 US qt (2.5 L)

- Check the oil level. 2 P. 143
- Check that there are no oil leaks.
- Install the under cowl.