

Lower Adjustment

If the upper clutch cable adjuster is threaded out near its limit, or the correct freeplay cannot be obtained, attempt adjustment with the lower clutch cable adjusting nut.

1. Turn the upper clutch cable adjuster all the way in (to provide maximum freeplay).
2. Remove the under cowl. 2 P. 142
3. Remove the pan screw and under cowl bolt.
4. Remove the rear under cover.

