

### **Starter Motor Operates But Engine Does Not Start**

---

Check the following items:

- Check the correct engine starting sequence. 2 P. 108
- Check that there is gasoline in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
  - u If the indicator light is on, contact your dealer as soon as possible.

### **Starter Motor Does Not Operate**

---

Check the following items:

- Check the correct engine starting sequence. 2 P. 108
- Make sure engine stop switch is in the  (Run) position. 2 P. 98
- Check for a blown fuse. 2 P. 197
- Check for a loose battery connection or battery terminal corrosion. 2 P. 123, 2 P. 137
- Check the condition of the battery. 2 P. 193

If the problem continues, have your motorcycle inspected by your dealer.