


## Main Fuse & FI Fuse

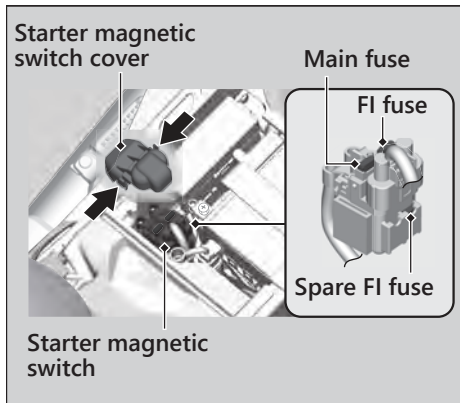

1. Remove the front seat. 2 P. 139
2. Remove the starter magnetic switch cover.
3. Pull the main fuse and FI fuse out one by one and check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
  - u Spare main fuses are provided in the fuse box. 2 P. 197
4. Reinstall parts in the reverse order of removal.

### NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your motorcycle inspected by your dealer.