



Multi-information display P.25

### Gear position indicator

Shows 1st to 6th gear positions. “-” appears when the transmission is not shifted properly.

### Quick Shifter indicator

Displays the current status of the Quick Shifter.

: Quick Shifter system is disabled.

: Quick Shifter upshifting is enabled.

: Quick Shifter downshifting is enabled.

: Quick Shifter upshifting and downshifting are both enabled.

**QUICK SHIFTER:** P.45 P.46

P.110