Instruments (Continued)

USER LETTER

You can select any 10 characters you like.

- Select the first character using the SEL (up) or SEL (down) button until a desired character appears.
 - Press and hold the SEL (up) or SEL
 (down) button to move the menu quickly.
- 2 Press the MODE button. The cursor moves to the next position.
- **3** Repeat the steps **1** and **2** to select characters for the other positions until a desired word is complete.
- When the tenth character is selected, the display returns to the upper level hierarchy.

12:34	SETTING	0 mph		
FUNCTION				
LAP TIME				
DISPLAY	<u>C</u> B R 1 0 0 0	RR		
GENERAL				
SERVICE				

A list of characters that can be selected										
Α	В	С	D	E	F	G	н	I		
J	К	L	М	Ν	0	Р	Q	R		
S	Т	U	V	W	Х	Y	Ζ	0		
1	2	3	4	5	6	7	8	9		
!	"	#	\$	%	&	'	'	(
)	*	+	,	-	•	1	:	;		
<	>	=	?	@	^	_				