Instruments (Continued) Average fuel mileage [AVG. CONS.]

Displays the average fuel mileage since the average fuel mileage was reset.

Display range: 0.0 to 99.9 MPG (mile/L, L/ 100km or km/L)

- Above 99.9 MPG (mile/L or km/L): "99.9" is displayed.
- Above 99.9 L/100km: "--.-" is displayed.
- When the average fuel mileage is reset: "--.-" is displayed.
 - --.- is displayed.



When "--.-" is displayed except for the above-mentioned cases, go to your dealer for service.

To Reset the Average Fuel Mileage

Press and hold the MODE button with the average fuel mileage displayed.

