
 









 
## Instruments *(Continued)*

 

### DOWN LVL

You can select the shift pedal load level for activating the Quick Shifter when downshifting.

- 1 Select the “DOWN LVL” using the **SEL**  (up) or **SEL**  (down) button, and press the **MODE** button.
  - ▶ Press and hold the **SEL**  (up) or **SEL**  (down) button to move the menu quickly.

12:34		SETTING	0 mph
SERVICE	SUSPENSION M3	DOWN	
EXIT		UP LVL	
FUNCTION QUICKSHIFTER		DOWN LVL	
LAP TIME	SUSPENSION A1		
DISPLAY	SUSPENSION A2	UP	

- 2 Select one of the three levels using the **SEL**  (up) or **SEL**  (down) button.
  - ▶ Press and hold the **SEL**  (up) or **SEL**  (down) button to move the menu quickly.
  - ▶ Available setting range: 1 (light operation) to 3 (heavy operation)

12:34		SETTING	0 mph
SERVICE	SUSPENSION M3		
EXIT		1	
FUNCTION QUICKSHIFTER		2	
LAP TIME	SUSPENSION A1	3	
DISPLAY	SUSPENSION A2		

- 3 Press the **MODE** button. The “DOWN LVL” setting is set, and then the display returns to the upper level hierarchy.