


# Indicators

If one of these indicators does not come on when it should, have your dealer check for problems.

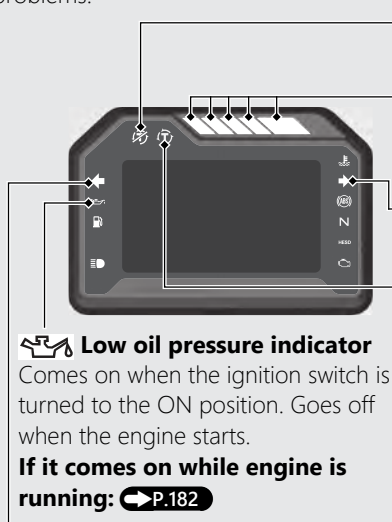

## Low oil pressure indicator

Comes on when the ignition switch is turned to the ON position. Goes off when the engine starts.

**If it comes on while engine is running:**  **P.182**

## Torque Control OFF indicator

Comes on when the Torque Control is turned off.

## **Shift indicators** **P.96**

Comes on briefly when the ignition switch is turned to the ON position.

## Right turn signal indicator

## Torque Control indicator

- Comes on when the ignition switch is turned to the ON position. Goes off when your speed reaches approximately 3 mph (5 km/h) to indicate Torque Control is ready to work.
- Blinks when Torque Control is operating.

**If it comes on while riding:**  **P.184**

## Left turn signal indicator