





HESD (Honda Electronic Steering Damper) indicator

Comes on briefly when the ignition switch is turned to the ON position.

If it comes on while engine is running:

➡ **P.183**

PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)

Comes on briefly when the ignition switch is turned to the ON position with the engine stop switch in the  (Run) position. Comes on when the ignition switch is turned to the ON position with the engine stop switch in the  (Stop) position.

If it comes on while engine is running: ➡ **P.182**