











Maintenance Schedule

Items	Pre-ride Check ➔ P. 54	Frequency*1											Annual Check	Regular Replace	Refer to page				
		x 1,000 km	x 1,000 mi	1	6	12	18	24	30	36									
				0.6	4	8	12	16	20	24									
Fuel Line 					I		I		I		I		I				-		
Fuel Level	I																	-	
Throttle Operation 	I								I		I		I					80	
Air Cleaner *2 																			-
Spark Plug 																			-
Valve Clearance 																			-
Engine Oil	I																		-
Engine Oil Filter																			-
Engine Idle Speed 																			-
Radiator Coolant *3	I																		70
Cooling System 																			-
Secondary Air Supply System 																			-
Evaporative Emission Control System 																			-

Maintenance Level

 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled.

 : Technical. In the interest of safety, have your vehicle serviced by your dealer.

Maintenance Legend

I : Inspect (clean, adjust, lubricate, or replace, if necessary)

L : Lubricate

R : Replace