


Clutch ► Adjusting the Clutch Lever Freeplay

- 1.** Loosen the minor lock nut and turn the minor clutch cable adjuster all the way in (to provide maximum freeplay). Tighten the minor lock nut.
- 2.** Slide the cable boot.
- 3.** Loosen the major lock nut.
- 4.** Turn the major clutch cable adjuster until the clutch lever freeplay is 10 - 20 mm (0.4 - 0.8 in).
- 5.** Tighten the major lock nut and check the clutch lever freeplay.
- 6.** Return the cable boot.
- 7.** Start the engine, pull the clutch lever in, and shift into gear. Make sure the engine does not stall and the vehicle does not creep. Gradually release the clutch lever and open the throttle. Your vehicle should move smoothly and accelerate gradually.

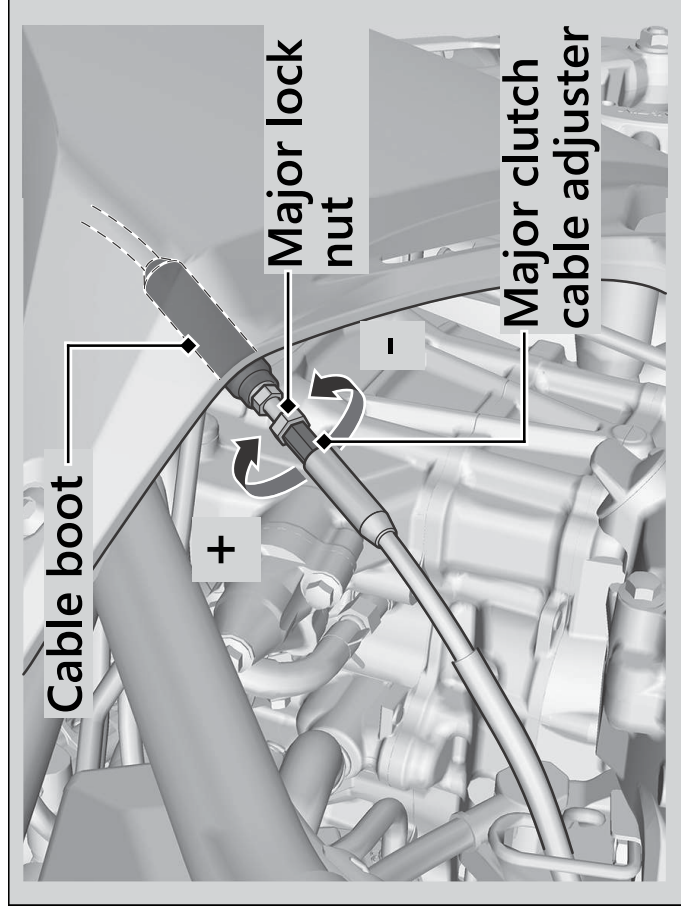

If proper adjustment cannot be obtained or the clutch does not work correctly, see your dealer.