


## Right Under Fairing

1. Remove the right middle fairing. ► P. 51
2. Remove the right under fairing by removing the bolts D and screw.

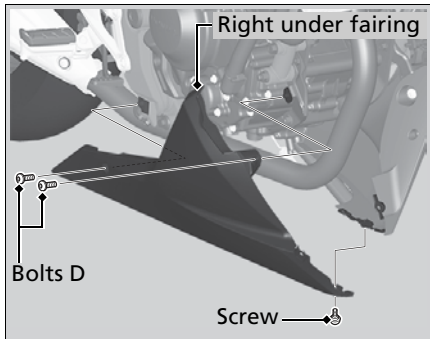

### Installation

Install the parts in the reverse order of removal.