

# Troubleshooting

|   |       |  |       |
|---|-------|--|-------|
| <b>Engine Will Not Start</b> .....  | P. 83 | <b>Other Warning Indications</b> .....             | P. 86 |
| <b>Overheating (Segment H flashes in coolant temperature gauge)</b> ..... | P. 84 | Fuel Gauge Failure Indication .....                | P. 86 |
| <b>Warning Indicators On or Flashing</b> .....                            | P. 85 | Coolant Temperature Gauge Failure Indication ..... | P. 86 |
| PGM-FI (Programmed Fuel Injection)  |       | <b>Tire Puncture</b> .....                         | P. 87 |
| Malfunction Indicator Lamp (MIL) .....                                    | P. 85 | <b>Electrical Trouble</b> .....                    | P. 94 |
| ABS (Anti-lock Brake System) Indicator .....                              | P. 85 | Battery Goes Dead .....                            | P. 94 |
|   |       | Burned-out Light Bulb .....                        | P. 94 |
|   |       | Blown Fuse .....                                   | P. 98 |