
Removing & Installing Body Components <a> Middle Cowl

- 3. Release the tabs from the slots.
- Remove the middle cowl, bend up the harness clip and disconnect the harness band clip (≥ P. 55) and front turn signal connectors.
 - Be careful not to apply weight to the middle cowl.
 - Carefully release the hooks.

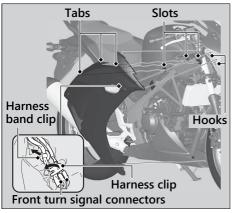

Installation

Install the parts in the reverse order of removal.

Check that the turn signals function properly after you install the right middle cowl.