


Right Under Cowl

Removal

1. Remove the right middle cowl. ► P. 55
2. Remove the right under cowl by removing the bolts D and screw.

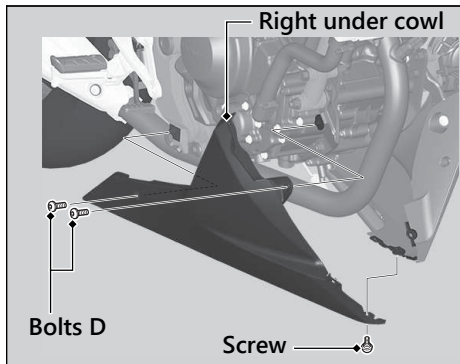

Installation

Install the parts in the reverse order of removal.