

If the fuel gauge indicators repeat flashing or turned off: P.90