
# **Switches**

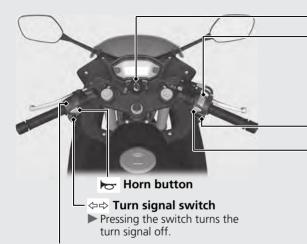

#### Headlight dimmer switch

• ≣○ : High beam • ≡○ : Low beam

### -Engine stop switch

Should normally remain in the (Run) position.

▶ In an emergency, switch to the 🂢 (Off) position to stop the engine.

## Start button

#### 

Switchable when the ignition switch is on. Can be turned to off regardless of the ignition switch position.

► The signals continue flashing with the ignition switch is OFF or LOCK after the hazard switch is on.