
Refueling

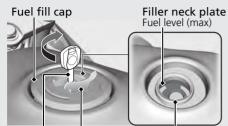

Lock cover Ignition key Fuel filler opening

Do not fill with fuel above the plate. **Fuel type:** Unleaded gasoline only **Recommended fuel octane number:** Pump Octane Number (PON) 86 or higher. **Tank capacity:** 4.15 US gal (15.7 liters)

Refueling and Fuel Guidelines -R13

Opening the Fuel Fill Cap

Open the lock cover, insert the ignition key, and turn it clockwise to remove the cap.

Closing the Fuel Fill Cap

After refuelling, align the fuel fill cap latch with the slot in the filler neck.

2 Push the fuel fill cap into the filler neck until it snaps closed and locks.

3 Remove the key and close the lock cover.

The key cannot be removed if the cap is not locked.

AWARNING

Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine, and keep heat, sparks, and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.