
Front Seat

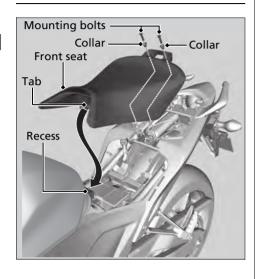

Removal

- 1. Remove the rear seat. ▶ P. 59
- **2.** Remove the mounting bolts and collars, and then pull the front seat back and up.

I Installation

- 1. Insert the tab into the recess.
- 2. Install the collars and mounting bolts.
- **3.** Tighten the mounting bolts securely. Make sure that the seat is locked securely in position by pulling up lightly.