

Troubleshooting

Engine Will Not Start	P. 86	Other Warning Indications	P. 90
Overheating (High coolant temperature indicator is on)	P. 87	Fuel Gauge Failure Indications	P. 90
Warning Indicators on or Flashing	P. 88	Tire Puncture	P. 91
Low Oil Pressure Indicator	P. 88	Electrical Trouble	P. 98
PGM-FI (Programmed Fuel Injection)		Battery Goes Dead	P. 98
Malfunction Indicator Lamp (MIL).....	P. 88	Burned-out Light Bulb	P. 98
ABS (Anti-lock Brake System) Indicator		Blown Fuse.....	P. 103
(CBR500RA only).....	P. 89		