

# Indicators

If one of these indicators does not come on when it should, have your dealer check for problems.



## ABS (Anti-lock Brake System) indicator

CBR500RA only

Comes on when the ignition switch is turned on.  
Goes off when your speed reaches approximately 6 mph (10 km/h).

**If it comes on while riding:** ➔ P.92



## High coolant temperature indicator

Comes on briefly when the ignition switch is turned on.

**If it comes on while riding:**

➔ P.90



## Low oil pressure indicator

Comes on when the ignition switch is turned on.  
Goes off when the engine starts.

**If it comes on while engine is running:** ➔ P.91

