

## Instruments *(Continued)*

### 2 Changing of tachometer display mode:

You can change the display mode of the tachometer.

- 1 Press **SEL** button to switch the display mode of tachometer.
- 2 Press **SET** button. The currently selected display mode is set, and then the display moves to the ordinary display.

#### Conventional display

Shows the engine RPM on the tachometer bar segment.

#### Peak hold display

Shows the engine RPM on the tachometer bar segment and peak hold segment.

