

**Equipment**

Owner's Manual .....	55, 129
Tool Kit.....	55

**F**

<b>Flooded Engine</b> .....	51
<b>Front Seat</b> .....	80
<b>Front Suspension</b> .....	106

**Fuel**

Average Fuel Mileage Meter.....	22
Consumption Meter .....	23
Current Fuel Mileage Meter .....	22
Gauge .....	20
Recommended .....	53
Remaining.....	20
Reserve Fuel Consumption.....	24
Tank Capacity .....	53

<b>Fuses</b> .....	69, 125
--------------------	---------

**G**

<b>Gasohol</b> .....	143
<b>Gasoline</b> .....	53
<b>Gear Position Indicator</b> .....	20

**H**

<b>Hazard Switch</b> .....	48
<b>Headlight Aim</b> .....	104
<b>Headlight Dimmer Switch</b> .....	48
<b>Helmet Holder</b> .....	54
<b>High Beam Indicator</b> .....	43
<b>Honda Contacts</b> .....	146
<b>Horn Button</b> .....	48

**I****Ignition Cut-off System**

Banking Sensor.....	129
Side Stand.....	94

<b>Ignition Key</b> .....	128
---------------------------	-----

<b>Ignition Switch</b> .....	49, 51, 129
------------------------------	-------------

<b>Indicators</b> .....	42
-------------------------	----

<b>Information Record</b> .....	152
---------------------------------	-----

<b>Instruments</b> .....	18
--------------------------	----

**L**

<b>Labels</b> .....	7
---------------------	---

<b>Load Limits</b> .....	15
--------------------------	----

<b>Loading Guidelines</b> .....	15
---------------------------------	----

<b>Low Oil Pressure Indicator</b> .....	45, 111
---	---------