


3. Pull the fuses out one by one with the fuse puller in the tool kit to check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
4. Reinstall the fuse box cover.
5. Reinstall the front seat.

## Main Fuse

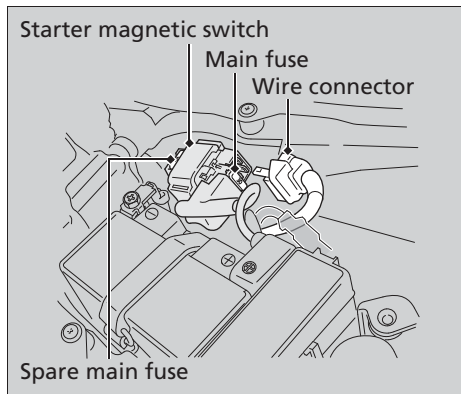

1. Remove the front seat. 2 P. 51
2. Disconnect the wire connector of the starter magnetic switch.