Left turn signal indicator ₽ 3 1 1 mi ± 122° [**10:29 Neutral indicator Comes on when the transmission is in Neutral

≣○ High beam indicator

⇒ Right turn signal indicator

HESD HESD (Honda Electronic Steering Damper) indicator

Comes on briefly when the ignition switch is turned to the ON position with the engine stop switch in the \bigcirc (Run) position.

If it comes on while engine is running: P.84