
Switches

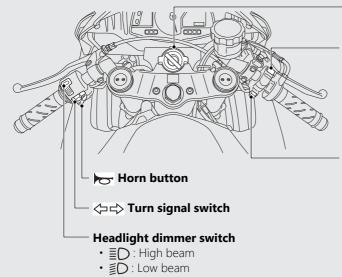

Engine stop switch

Should normally remain in the \bigcirc (Run) position.

▶ In an emergency, switch to the ☆ (Off) position to stop the engine.

Start button

Headlight turns off when operating the starter motor.