


## Blown Fuse


Before handling fuses, see "Inspecting and Replacing Fuses." ► P. 42

### Fuse Box Fuses

CBR600RR

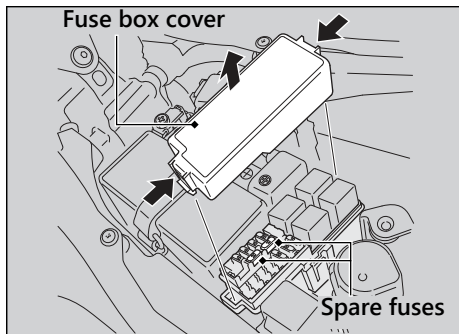

CBR600RA

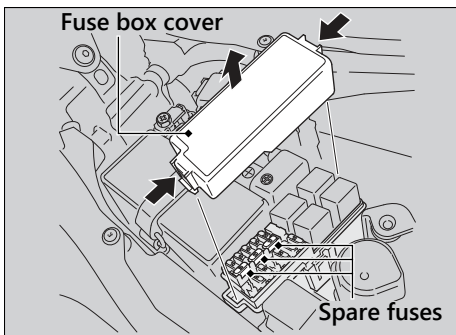

1. Remove the front seat. ► P. 52
2. Remove the fuse box cover.