

Troubleshooting

Engine Will Not Start	P. 82	Battery Goes Dead	P. 95
Overheating (High coolant temperature indicator is on)	P. 83	Burned-out Light Bulb.....	P. 95
Warning Indicators On or Flashing	P. 84	Blown Fuse	P. 99
Low Oil Pressure Indicator	P. 84		
PGM-FI (Programmed Fuel Injection)			
Malfunction Indicator Lamp (MIL).....	P. 84		
Combined ABS Indicator	P. 85		
HESD (Honda Electronic Steering Damper)			
Indicator.....	P. 85		
Other Warning Indications	P. 86		
Fuel Gauge Failure Indication.....	P. 86		
Tire Puncture	P. 87		
Electrical Trouble	P. 95		