

### Starter Motor Operates But Engine Does Not Start

---

Check the following items:

- Make sure engine stop switch is in the (Run) position. ➤ P. 24
- Check the correct engine starting sequence. ➤ P. 27
- Check that there is gasoline in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
  - ▶ If the indicator lamp is on, contact your dealer as soon as possible.

### Starter Motor Does Not Operate

---

Check the following items:

- Check the correct engine starting sequence. ➤ P. 27
- Check for a blown fuse. ➤ P. 99
- Check for a loose battery connection (➤ P. 51) or battery terminal corrosion (➤ P. 41).
- Check the condition of the battery. ➤ P. 95

If the problem continues, have your motorcycle inspected by your dealer.